

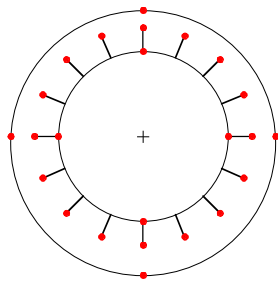


6" SQ. 


OFFSET TEMPLATE

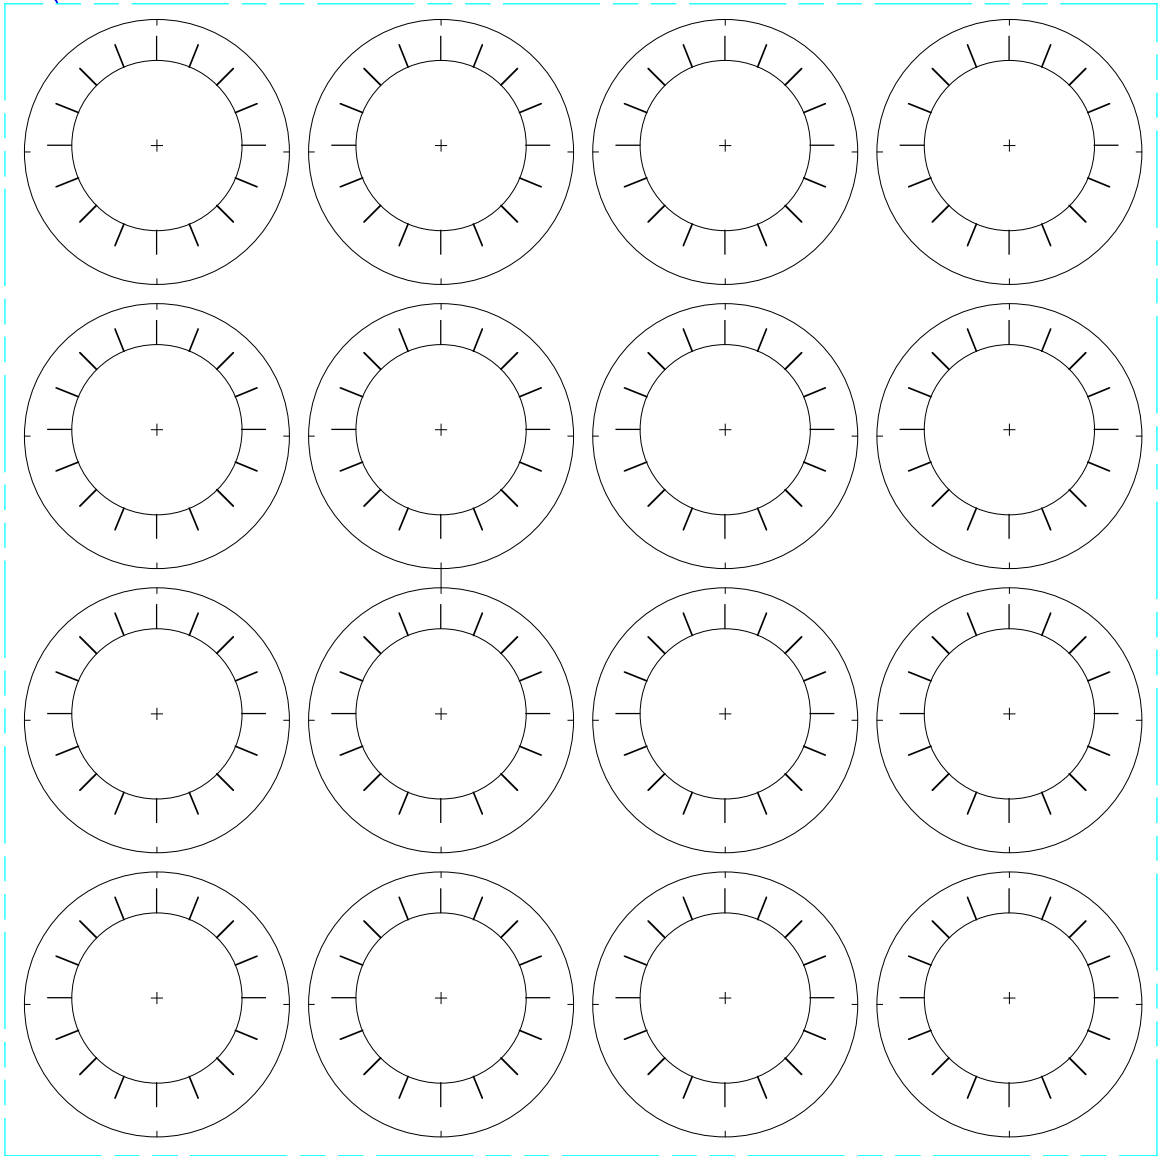

1. Prick at red points:
4@ ID,
4@ OD,
16 @ outer
radiating lines.
(4 already done.)

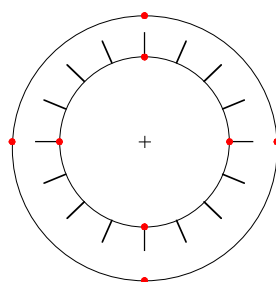


2. Remove paper.
3. Mark the 8 points of the ID & OD with sharpie.

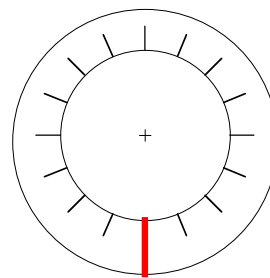

4. Scribe line at widest width.

5. Mark line with sharpie.

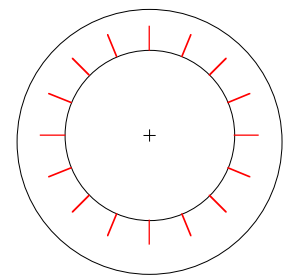

6. Remove teflon and punch holes.

7. Snip at radiating lines.